

Fig. 29 BEFORE LANDING

A) - FLY OVER AND CHECK IF RUNWAY IS FREE

- 1 - Pass at altitude (600 - 1.000 ft QFE)

B) - LANDING AND TAKEOFF PATTERN

- 2 - Runway
- 3 - Pattern
- 4 - Pattern entries; use according to wind direction
- 5 - Final landing
- 6 - Takeoff leg
- 7 - Crosswind leg
- 8 - Windward side
- 9 - Hangar
- 10 - Wind-sock oriented according to wind
- 11 - Built-up area, no flying over

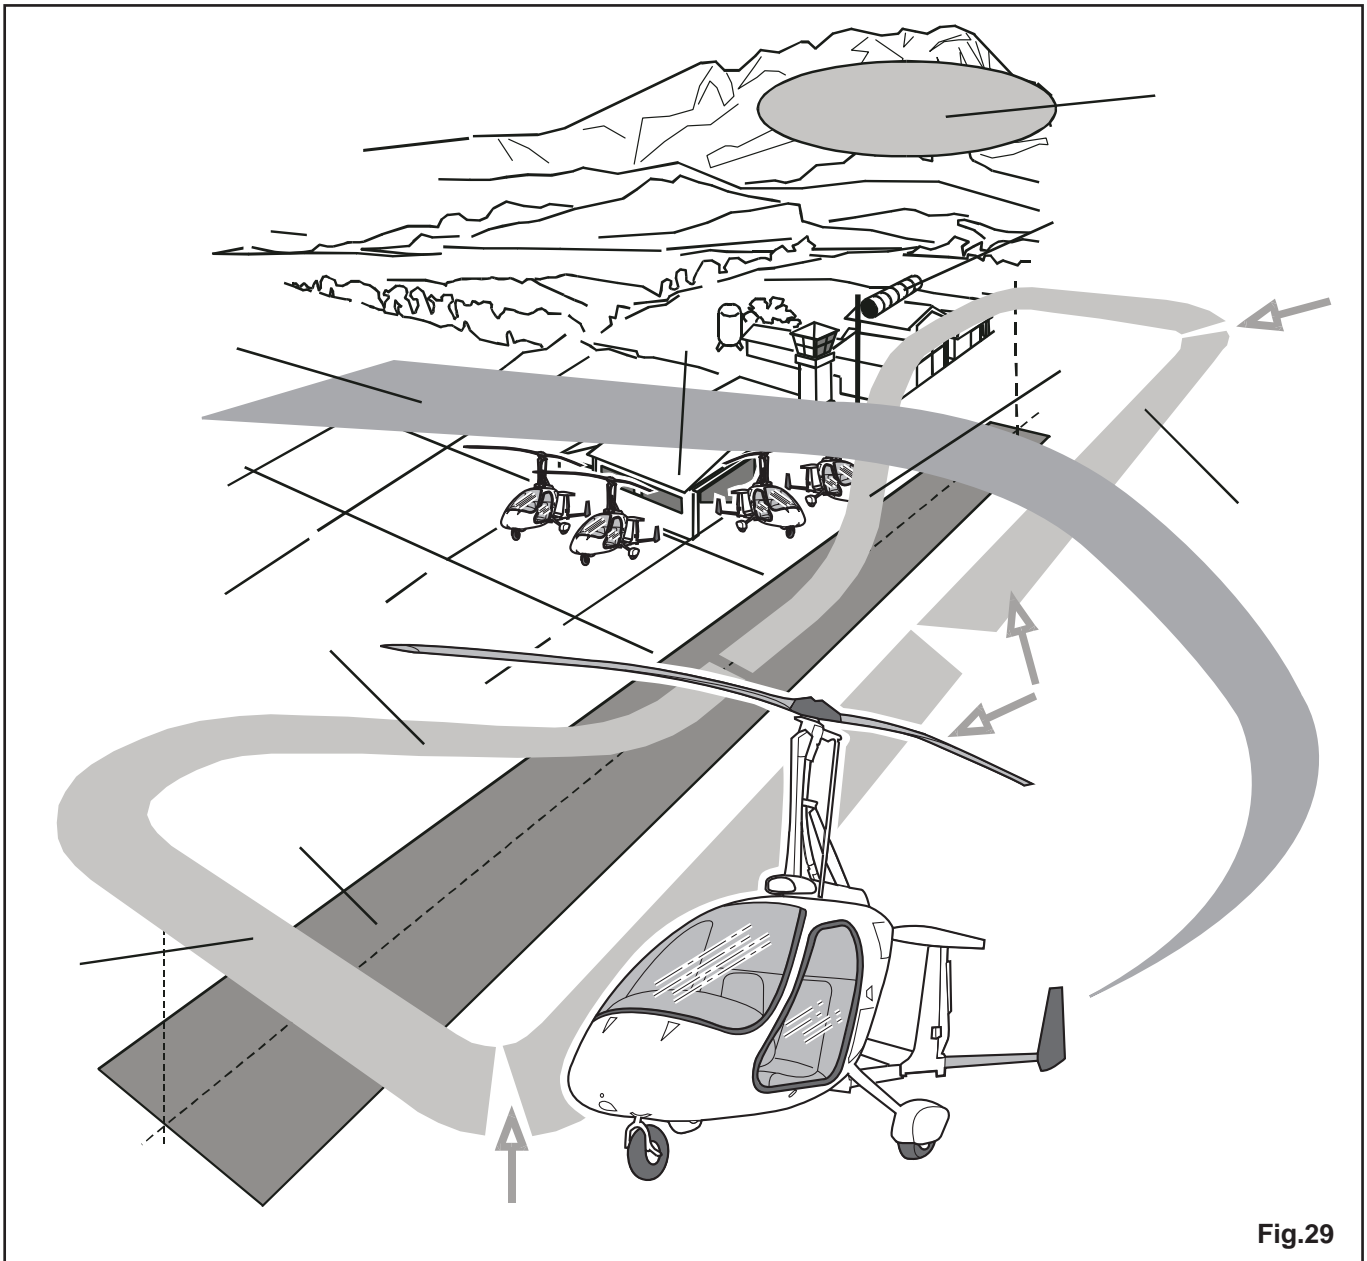


Fig.29